

Electric car for children - Instructions



Electric fire engine

Before using the product for the first time, it is important that you carefully read the accompanying instructions. It is essential that you handle the product correctly to prevent damage. Important basic rules for the electric car are to never deeply discharge the batteries and to avoid moisture. Please note that the remote control needs to be paired with the electric car before it can be used. Hold down the PAIR/CODE/CAR SELECT button on the remote control while starting the car to pair them.

1. THIS ELECTRIC CAR, CHARGER AND REMOTE CONTROL ARE MANUFACTURED IN ACCORDANCE WITH THE FOLLOWING EU DIRECTIVES:


2011/65/EU, (EU) 2015/863, 2014/53/EU, 2014/30/EU, (EC) NO. 1907/2006 & Amendment No. 552/2009, 2009/48/EC

2. TECHNICAL INFORMATION:

Dimensions (LxWxH): 115 x 65 x 60 cm
Battery type: 1 lead-acid battery 12V 10Ah
Motor: 12V, 2 x 35W (70W)
Top speed: Approx. 5-6 km/h*
Charger input: 230V 50Hz AC
Charger output: 12V DC
Charging time: 8-12 hours
Travel time per charge: Up to 1 hour* Max
load weight: 30 kg
Remote control type: 2.4G, range 10-15 m.

*= Operating time and speed vary depending on factors such as driving style, driving surface, load weight, air temperature, etc. (See point number 7.)

3. EXPLANATION OF SYMBOLS CHARGER AND ELECTRIC CAR:

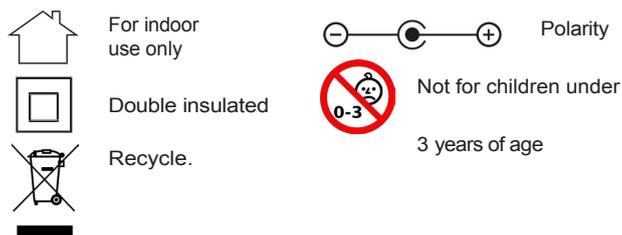

4. SAFETY REGULATIONS - CHARGING AND BATTERY:

- Feel free to test the car after installation, but before using the product for the first time, the battery must be charged for 12 hours.
- Never deep charge the battery. As soon as the battery starts to lose power, it needs to be charged. If the battery charge level falls below 30%, the battery cells may be damaged.
- Only charge in a well-ventilated, dry and cool environment.
- Never cover the charger with anything.
- Never charge the battery for more than 12 hours at a time.
- Never leave the product unattended while charging.
- Never allow children to charge the battery on their own.
- Unplug the charger from the wall socket and the product after charging is complete.
- Never short-circuit the battery.
- Regularly check that the cables to the battery and charger are undamaged and that no connection contacts are loose.
- Never expose the battery to temperatures above 40 degrees Celsius or below minus 5 degrees Celsius.

LONG-TERM STORAGE: Charge the battery before storage and maintain it once a month to prevent damage.

5. CHARGING THE ELECTRIC CAR:

- Set the power switch to "OFF".
- First connect the charger to the battery socket on the car and then connect the charger to the mains.
- Charge the battery for approximately 12 hours before first use. Do not charge the battery for more than 12 hours to avoid overheating the charger.
- The charger will become warm during charging. If it becomes very hot, charging must be interrupted and the charger disconnected from the socket. Check both the battery and the charger.
- Only use the charger in dry areas.
- Cables and connections to the charger and battery must be checked regularly. If damage is detected, neither the battery nor the charger may be used until the damage has been repaired.
- When the battery is fully charged, disconnect the charger. Store the charger in a dry and cool place.

6. USE:

- All use must be supervised by an adult.
- Children under 3 years of age should not use the product on their own.
- This electric car is intended for use on flat surfaces such as pavements, garage driveways or playgrounds. Never use the car in busy areas and never drive on the street. If you are driving on uneven surfaces such as grass, gravel or slopes, it is important to be observant.

The motor sounds strained. **If the electric car continues to be used despite the motor being overstrained, there is a risk that the motor will overload and break down. If the fuse trips frequently, this is a sign of overstrain.**

- Never drive near swimming pools or other areas with waterways.
- The vehicle must never be used on wet surfaces or in the rain. Always store the vehicle in a dry environment when not in use.
- Never drive in the dark or in poorly lit areas.
- Clean the vehicle by wiping it with a slightly damp cloth. Never submerge the vehicle in water or spray it with a hose.
- Do not exceed the maximum load of 30 kg.
- The child must be seated before the accelerator pedal is pressed.
- Always stop the vehicle before changing direction to drive forwards or backwards.
- Plastic bags pose a choking hazard to small children. Remove all packaging material after unpacking.

7. OPERATING TIME AND PERFORMANCE:

Operating time and speed vary depending on a number of factors. Optimal performance is achieved at an air temperature of around 20 degrees, on hard, flat surfaces with a light driver. Cold weather has a very negative effect on battery performance. Driving style also has a significant impact; operating time increases if you avoid repeated starts/stops and do not use the product's faster speed modes.

8. WASTE MANAGEMENT:

Sort packaging materials according to local regulations. Used electrical and electronic products, including all types of batteries, must be taken to a collective for recycling.
(According to directive 2012/19/EU och 2006/66/EC).

